# **TECHNICAL SPECIFICATIONS**

IR EYE INPUT	
IR Frequency Range	30KHz to 80KHz
Capture Distance	Up to 30'
Cable Connector	3.5mm mono jack
IR Signal Indicator	Green LED
Signal Type	TTI

IR EMITTER OUTPUT		
IR Frequency Range	30KHz to 80KHz	
Emitter Distance	Up to 25'	
Cable Connector	3.5mm stereo jack	
IR Signal Indicator	Green LED	
OTHER		
Power	12VDC2A	
Cable Link	Db25 to matrixes	
Dimensions	17" W x 3.75" H x 1.75" D	
Approvals	UL, CE, ROHS Compliant	
Weight	5lbs	

### WHAT'S IN THE BOX

PART NO.	QTY	DESCRIPTION
IRB-MXU-32PS	1	IR Blaster, 32-Port IR Router
SM-MXU-EYE	1	External Infrared Receiver
SRC-2A	1	IR Remote Control
PS5VDC4A	1	Power Supply
User Manual	1	


### **IR-BLASTER FRONT**



### **IR-BLASTER REAR**



# **IR-BLASTER DIAGRAM**

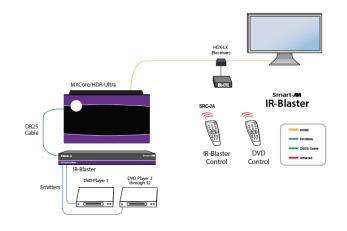



**Designed and Manufactured in the USA** 

800.AVI.2131

Tel: (818) 503-6200

Fax: (818) 503-6208

11651 Vanowen St. North Hollywood, CA 91605

**SmartAVI.com** 







**32-Port IR Matrix Router** 

### **CONTROLLING THE IR-BLASTER**

#### **IR-EYE External Receiver**

The IR-EYE external receiver offers infrared remote control functionality at distances up to 30 feet. Switch between signals without ever having to touch the matrix itself.

### **IR-Remote Control**

Paired with the IR-EYE receiver, the SmartAVI IR-Remote Control offers matrix command capabilities, as well as fully-functional HDTV and connected device control.

#### **LED Status Indicator**

Green: Signal Active

Red: Signal Interrupted/Disconnected

Orange: Damaged Signal

Flashing: Acquiring signal/standby

# **IR-BLASTER FRONT**



### **IR-BLASTER REAR**



### **CONNECTING THE IR-BLASTER**



- 1. Connect IR-Blaster to a SmartAVI video matrix via one DB25 cable
- 2. Connect IR-Blaster to power source
- 3. Press the On/Off switch to activate the IR-Blaster
- 4. Turn on your connected signal sources
- 5. When the IR-Blaster's status LED turns green, you may commence IR signal operation.

### **INSTALLATION DIAGRAM**

