TECHNICAL SPECIFICATION

VIDEO			
Format	HDMI 1.4, 1.0		
Input Interface	(4) HDMI (female)		
Output Interface	(1) HDMI (female)		
Resolution	Up to 4K (3840x2160 @30Hz)		
DDC	5 volts p-p (TTL)		
Input Equalization	Automatic		
Input Cable Length	Up to 20 ft.		
Output Cable Length	Up to 20 ft.		
AUDIO			
Input Interface	(4) 3.5 mm Stereo Audio		
Output Interface	(1) 3.5 mm Stereo Audio		
Impedance	600 Ohm		
Frequency Response	20 Hz to 20 kHz		
Nominal Level	0-1.0 V		
Common Mode	Rejection at 60 dB		
USB			
Signal Type	USB 2.0, 1.1, and 1.0 w/ internal hub		
Input Interface	(4) USB Type B		
Output Interface	(2) USB 1.1 Type A for K/M (2) USB 2.0 Type A Transparent		
CONTROL			
Front Panel	Buttons, Select/Switch between sources and view the current selected channel		
RS-232	DB9 Female - 115200, N, 8, 1, No flow control		
Hot Keys	Via Keyboard		
OTHER			
Power	100-240 VAC/ 5VDC2A		
Dimensions	2" H x 5.75" D x 12.75" W		
Weight	3.5 lbs		
Approvals	UL, CE, ROHS Compliant		
Operating Temp.	32-131°F (0-55 °C)		
Storage Temp.	-4-185 °F (-20-85 °C)		
Humidity	Up to 95%		
Emulation	Keyboard and Mouse		

WHAT'S IN THE BOX

PART NO.	Q-TY	DESCRIPTION
HDN-4P-S	1	4-Port HDMI KVM Switch with USB 2.0 and Audio Sharing
PS5VD2A	1	PS5VD2A Power Supply
Quick Start Guide	1	

Smart-AVI SMART AUDIO VIDEO INNOVATION

HDN-4P

4-Port HDMI KVM Switch with USB 2.0 and Audio Sharing



ACCESS AND CONTROL UP TO 4 COMPUTERS FROM A SINGLE WORKSTATION

Quick Start Guide

NOTICE

The information contained in this document is subject to change without notice. SmartAVI makes no warranty of any kind with regard to this material, including but not limited to, implied warranties of merchantability and fitness for particular purpose. SmartAVI will not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

No part of this document may be photocopied, reproduced, or translated into another language without prior written consent from SmartAVI Technologies, Inc.



800.AVI.2131, 702.800.0005 2455 W Cheyenne Ave, Suite 112 North Las Vegas, NV 89032

SmartAVI.com

SYSTEM CONTROL

There are three ways to control the HDN-4P: Keyboard HotKeys, RS-232 Serial Commands, and Front Panel Buttons.

The settings for the serial connection are as follows: Baud rate: **115200**; Data Bits: **8**; Parity: **None**; Stop Bits: **1**; Flow Control: **None**.

The following commands can be used:

Command	HotKey	RS-232
All USB, audio, video	[CTRL] [CTRL] [port#] [ENTER]	// m [port#] [ENTER]
Audio Only	[CTRL] [CTRL] a[port#] [ENTER]	// a [port#] [ENTER]
KM Only	[CTRL] [CTRL] c[port#] [ENTER]	// c [port#] [ENTER]
USB Only	[CTRL][CTRL] u[port#][ENTER]	// u [port#] [ENTER]
Learn EDID	[CTRL] [CTRL] e[ENTER]	//e[ENTER]
Trigger Hotplug	[CTRL] [CTRL] h [ENTER]	//h[ENTER]
Reset Software	[CTRL] [CTRL] r	//r[ENTER]
Factory Defaults	[CTRL] [CTRL] f	// f [ENTER]
Same as front panel ■ M1 button	[HK][HK]↑	N/A
Same as front panel M2 ▶ button	[HK][HK]↓	N/A
Get Port Status	N/A	// ?? [ENTER]

CUSTOM HOTKEY TRIGGERS

Users are able to customize the keys that trigger Hotkeys. The following keys are allowed:

CTRL (Left/Right), ALT, SHIFT (Left/Right), Caps Lock, Scroll Lock, F1-F12

Change HK Trigger

HK + HK + X + desired hotkey

View Current HK Trigger

Use the RS-232 command: //??[ENTER]

Reset HK Trigger


Run "Factory Defaults" command.

Default HotKey Trigger

CTRL (Left)

HARDWARE INSTALLATION

- 1. Ensure that power is disconnected from the HDN-4P.
- 2. Connect the HDMI cables, and USB cables (male-A to male-B) from the computers to the respective ports on the HDN-4P.
- 3. Optionally connect Audio cables from the computers to the respective ports on the HDN-4P.
- 4. Optionally connect RS-232 for control functions.
- Connect a USB keyboard and USB mouse to the two USB ports marked for keyboard & mouse on the HDN-4P.
- 6. Optionally connect up to 2 USB 2.0 devices to the HDN-4P.
- 7. Optionally Connect speakers to the Audio Out port on the HDN-4P.
- Connect the display to the HDMI Output port on the HDN-4P.
- 9. Power on the HDN-4P.

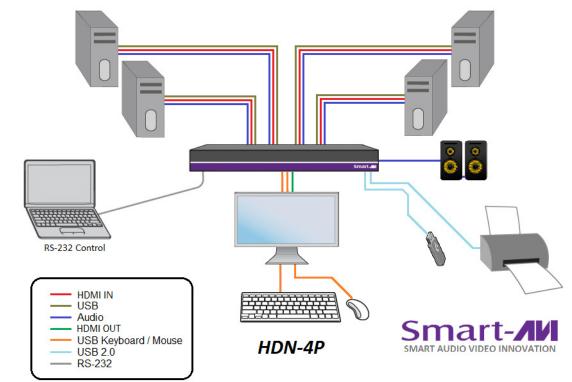

HDN-4P FRONT



HDN-4P BACK

